



INSTALLATION INSTRUCTIONS FOR PLACEMENT OF LTF18WT, LTF24WT, LTF30WT / WILD TIMBER 18", 24" AND 30" LOG SETS.

GENERAL INFORMATION

THE FIREPLACE MUST BE OFF AND COLD BEFORE BEGINNING.
READ ALL OF THE STEPS BEFORE STARTING THE INSTALLATION.

PACKAGING LIST

1 ea. Complete Log Set
1 ea. Installation Instructions

TOOLS/SUPPLIES

NEEDED

Safety Glasses
Protective Work Gloves
Heat Resistant Gloves

Installation and service must be performed by a qualified installer, service agency or the gas supplier. Any safety screen, guard, or barrier removed for servicing an appliance must be replaced prior to operating the heater. The fireplace screen or guard designed for this unvented appliance must be installed prior to operation.

IMPORTANT: Read the owner's manual carefully and completely before trying to assemble, operate or service this fireplace. Improper use of this fireplace can cause serious injury or death from burns, fire, explosion, electrical shock and carbon monoxide poisoning.

THESE LOG PLACEMENT INSTRUCTIONS ARE A SUPPLEMENT TO THE LOG BURNER INSTRUCTIONS. LOG BURNER INSTRUCTIONS MUST BE READ AND FOLLOWED TO THEIR ENTIRETY TO ASSURE SAFE AND PROPER INSTALLATION AND OPERATION. THE LOG BURNER INSTRUCTIONS ARE INCLUDED SEPARATELY INSIDE THE CARTONED LOG BURNER ASSEMBLY. ADDITIONAL COPIES OF BOTH THESE INSTRUCTIONS AND THE LOG BURNER INSTRUCTIONS ARE AVAILABLE AT www.superiorfireplaces.us.com.

INSTALLER:

Leave instructions with the appliance.

CONSUMER:

Retain instructions for future reference.

This log set shall only be used with burners listed below:

TF18NR	TF18PR
TF18NV	TF18PV
TF18NE	TF18PE
TF2430NR	TF2430PR
TF2430NV	TF2430PV
TF2430NE	TF2430PE
TRUEFLAME18ZMN	TRUEFLAME18ZMP
TRUEFLAME24ZMN	TRUEFLAME24ZMP

INSTALLATION OF LOGS ON ANY OTHER BURNER IS STRICKLY PROHIBITED.

If your gas log burner is not listed above, please refer to your owners manual or contact IHP Tech Support/Customer Service for further assistance.

This is a complete Log Set and shall not be used otherwise. This log set shall not be used for replacement of single logs.


It is very important to install these logs exactly as instructed. DO NOT MODIFY LOGS.

Failure to position the parts in accordance with these instructions or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.


CAUTION: Burn hazard! Logs will remain hot after use. If you need to reposition any log to maintain the proper layout, use heat resistant gloves or allow logs adequate time to cool before handling.

1. Remove the entire Log Set provided and check for damage. If damaged, STOP!!! Contact dealer or IHP.
2. If you currently have a log set installed: Remove the entire Log Set that is currently installed on your Gas Log Burner and discard entire set.
3. Follow the steps found beginning on the next page for installation of your new complete Log Set.


1. Place the rear log on burner assembly. Log will fit right over end of burner and rest in middle of "U"-burner (see *Figure 1*).

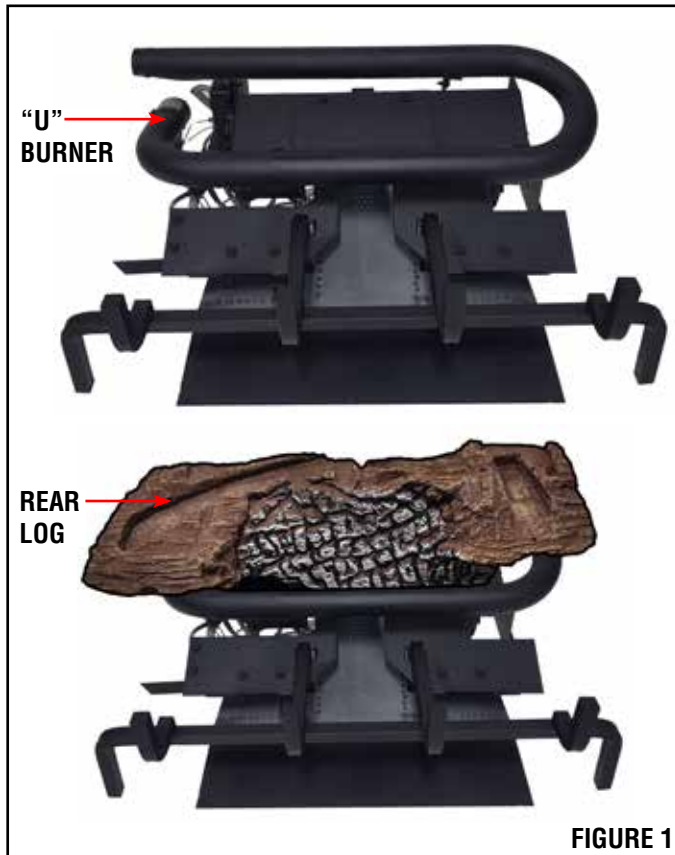


2. Place the middle log in front of "U"-burner and against the edges of plate (see *Figure 2*).

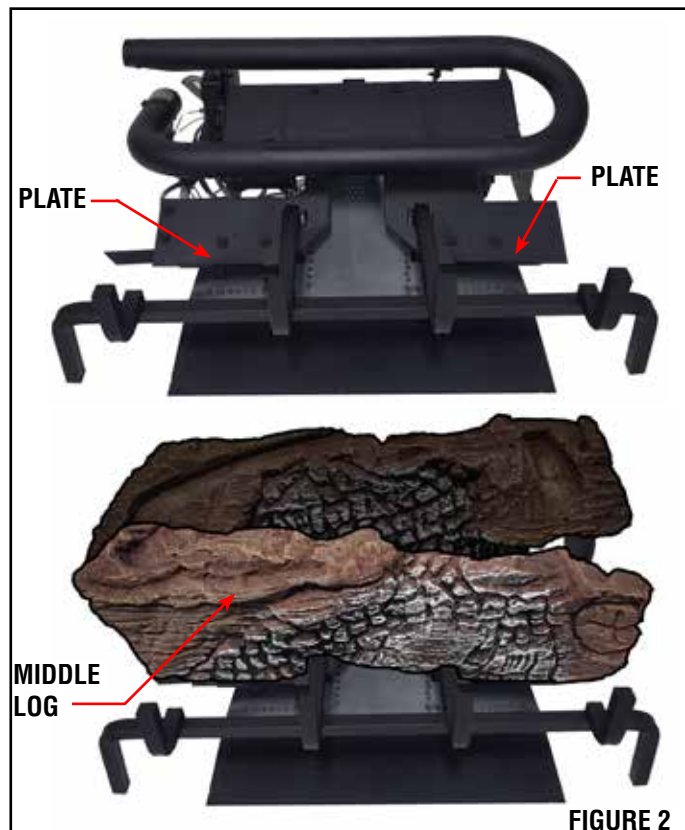


3. Place the front left log on the burner assembly between the middle log and the two left hand side grate fingers. The back of the front left log will rest against the front of the middle log. The notch (or mouth) in the end of this log will fit around the left vertical grate bar leaving part of the log underneath the grate bar (see *Figure 3*).

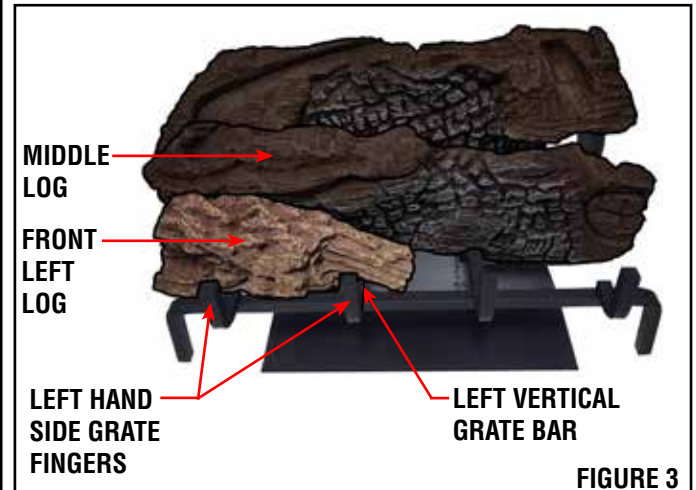


4. Place the front right log on the burner assembly between the middle log and the two right hand side grate fingers. The back of the front right log will rest against the front of the middle log. The notch (or mouth) in the end of this log will fit around the right vertical grate bar leaving part of the log underneath the grate bar (see *Figure 4*).

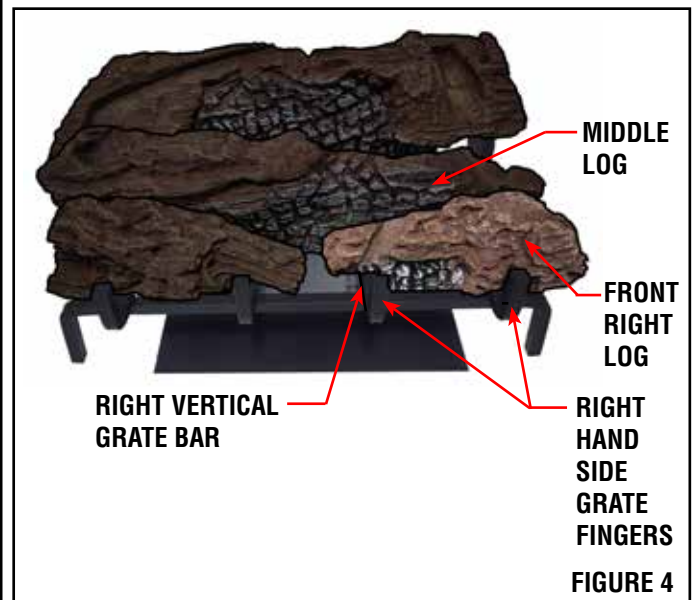


5. Place the right top back log using projections on bottom of log and the matching landings on the rear, middle and front right log (see *Figure 5*).

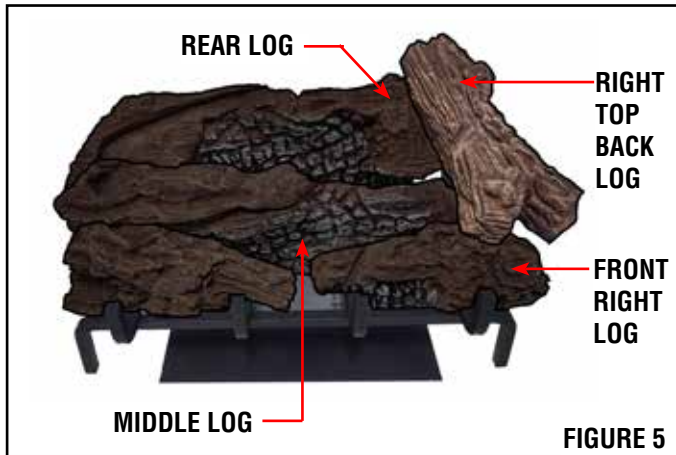


6. Place the top right crossover log using projections on log and matching landing on the right top back log, middle log and front right log (see *Figure 6*).

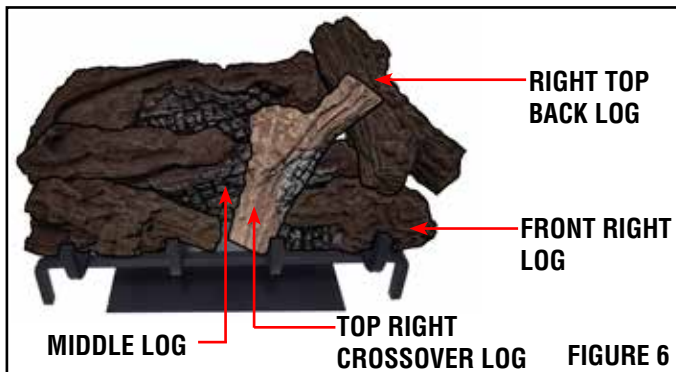

7. Place the left top log using the projection on log and matching landing in rear log (see *Figure 7*).

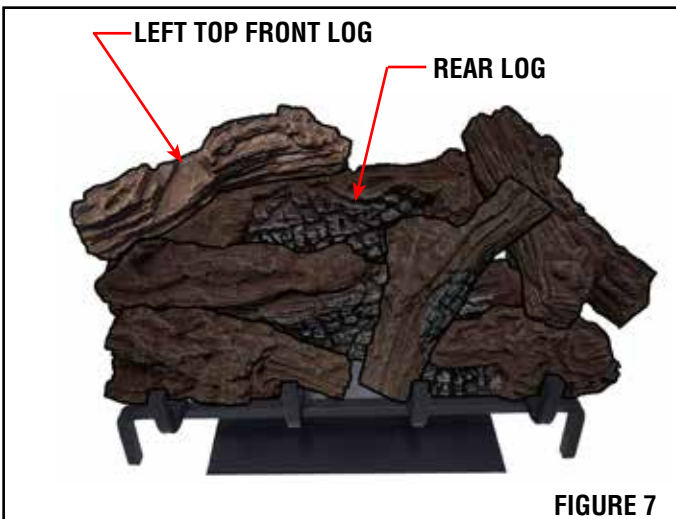

8. Place the left crossover log using projections in log and matching landings in the left top front log and middle log (see *Figure 8*).

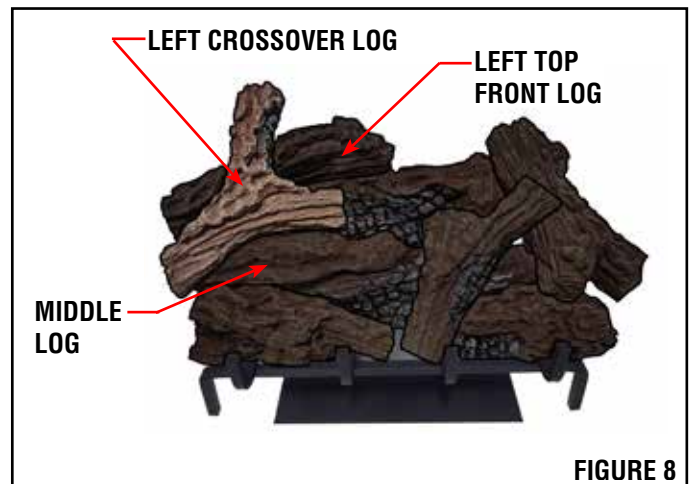

After setting the logs into position as described above, ensure each is properly and firmly seated. The vent-free gas log set will not function as intended if the logs are not correctly positioned. When placed properly, the flames will not strike any portion of the logs. Periodically check the positioning of all logs to ensure proper log placement and stability. If any flame is striking the logs, recheck log placement. Adjust to conform with instructions. There should be no flame impingement on the logs.

INSTALLATION IS NOW COMPLETE



Innovative Hearth Products (IHP) reserves the right to make changes at any time, without notice, in design, materials, specifications, and prices, and also to discontinue colors, styles, and products. Consult your local distributor for fireplace code information.

Printed in U.S.A. © 2020 Innovative Heath Products
P/N 901093-00 Rev. NC 02/2021

NOTE: DIAGRAMS & ILLUSTRATIONS ARE NOT TO SCALE



1769 East Lawrence Street , Russellville, AL 35654